

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING LUMINAIRE

This luminaire is intended for installation in accordance with the National Electrical Code and local regulations.

To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

IS:406


B1004

Page 1 of 1


INSTRUCTION SHEET FOR 6.5" PENDALYTE™

Note: This instruction sheet covers several luminaire styles. Powerhead assembly, lamp type, and reflector style may vary slightly from that shown, although installation is the same.


1. Remove CANOPY. Pull supply wires through hole in center of OUTLET BOX PLATE (Fig. 1) and attach OUTLET BOX PLATE to outlet box using OUTLET BOX SCREWS (provided with outlet box).
2. Pass CORD through hole in center of CANOPY.
3. Determine desired CORD length and attach RELIEF BUSHING to CORD with pliers. **NOTE: Be certain of CORD length before attaching RELIEF BUSHING as it is difficult to remove and reposition.**
4. Align HINGE on RELIEF BUSHING with HINGE MARK on CANOPY BRACKET (Fig. 2) and snap into square hole in CANOPY BRACKET.
5. Tie KNOT in CORD above the CANOPY BRACKET.
6. To wire compact fluorescent unit see wire diagram below. Use wire nuts provided.
7. Using WIRE NUTS (local hardware item) make electrical connections: black BALLAST lead to hot (black) supply lead; white BALLAST lead to neutral (white) supply lead. Green BALLAST lead is ground wire and must be connected to grounding terminal or ground lead inside outlet box.
8. To wire incandescent unit: Using WIRE NUTS (local hardware item) connect black CORD wire to hot (black) supply lead, connect white CORD wire to neutral (white) supply lead, green CORD wire is ground wire and must be connected to grounding terminal or ground lead inside outlet box.
9. Attach CANOPY to CANOPY BRACKET with black CANOPY SCREWS.

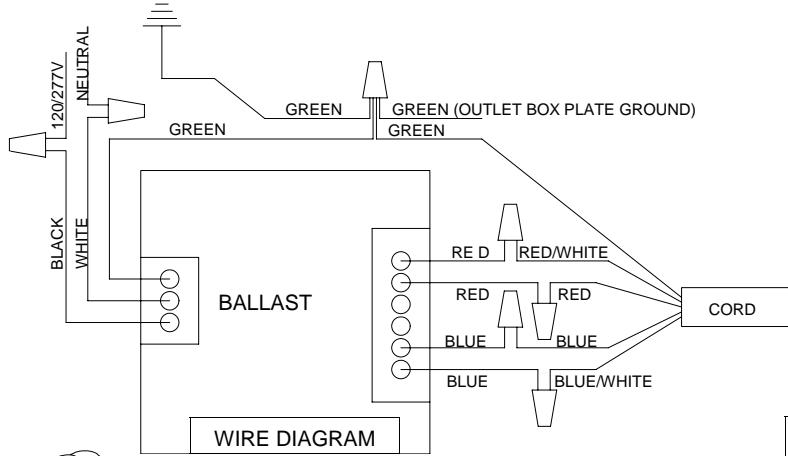

GLASS SHADE INSTALLATION (fig.3)

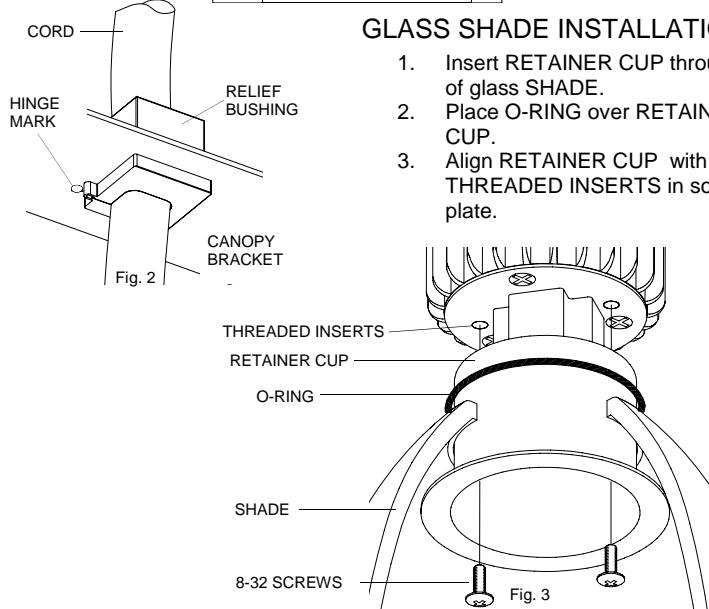

CAUTION: MAXIMUM WATTAGE AS MARKED ON LUMINAIRE MUST NOT BE EXCEEDED.

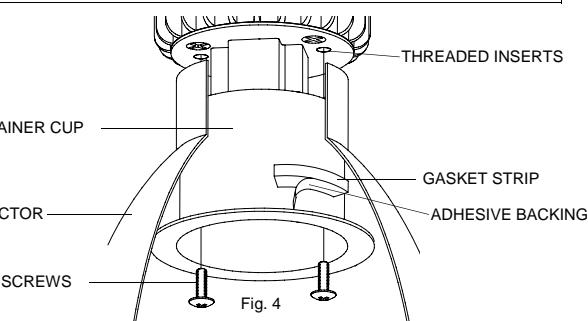

ALUMINUM REFLECTOR INSTALLATION (Fig. 4)

1. Peel ADHESIVE BACKING off of 3 GASKET STRIPS. Apply GASKET STRIPS, equally spaced, to lip of RETAINER CUP.
2. Insert RETAINER CUP through top of REFLECTOR and align with THREADED INSERTS in socket plate.
3. Secure with 8-32 screws.

LIGHTOLIER®

LIGHTOLIER A GENTLYE THOMAS COMPANY
631 Airport Road, Fall River, MA 02720